

REVISION HISTORY			
<u>REV</u>	<u>DATE</u>	<u>ORIGIN</u>	<u>REASON FOR CHANGE(S)</u>
A	22Jan2019	Paul Gettins	Initial Release

Q-CODE Q28B QUALITY REQUIREMENTS

National Recognised Test Laboratory UL/CSA
Off the Shelf Power cords

With acceptance of/or receipt of product against this order the supplier agrees to allow Plexus, their customer and regulatory authorities the right of access to their facility and all applicable records. The following are the quality requirements for product purchased under Q-code Q28B. Unless a written waiver is received from Plexus, the supplier agrees to abide by the quality requirements listed below. Plexus will only give a written wavier after notifying and obtaining approval from the customer authorized person and Certified Body.

All Shipments-The documentation and quality requirements will be as follows:


A. Certificate of Compliance - detail the following:

- A statement of overall compliance to all the applicable specifications and a statement is required to list, all the applicable specifications such as detailed below but is not exclusive:
 - Name of Manufacturer/OEM/OCM
 - Manufacturer's/OEM's/OCM's part number when required
 - Plexus part number
 - Revision or EC level if applicable
 - Quantity
 - Purchase order number
 - Lot # or Date Code ₁ or Serial numbers for each shipment
 - The drawings and specifications provided by Plexus
 - The requirements of the specific PO
 - National Recognised Test Laboratory UL/CSA Requirements
- Signed and dated by an authorised representative

₁ The minimum-required date code format shall identify the 2-digit workweek, 2-digit year (WWYY). If the component marking contains a lot and date code, then those markings must be traceable to the COC.

Shipments of multiple lot and/or date codes must be identified separately on the COC with the actual quantity shipped for each. Each lot and/or date code shall be independently packaged (i.e., no mixed lot/date codes within a package: reels, trays, tubes, bags, etc.).

- B. Labelling - All Power cords with Q-code Q28B detailed on the Plexus PO must have the following label affixed on the packaging or individual bag (bag preferred).

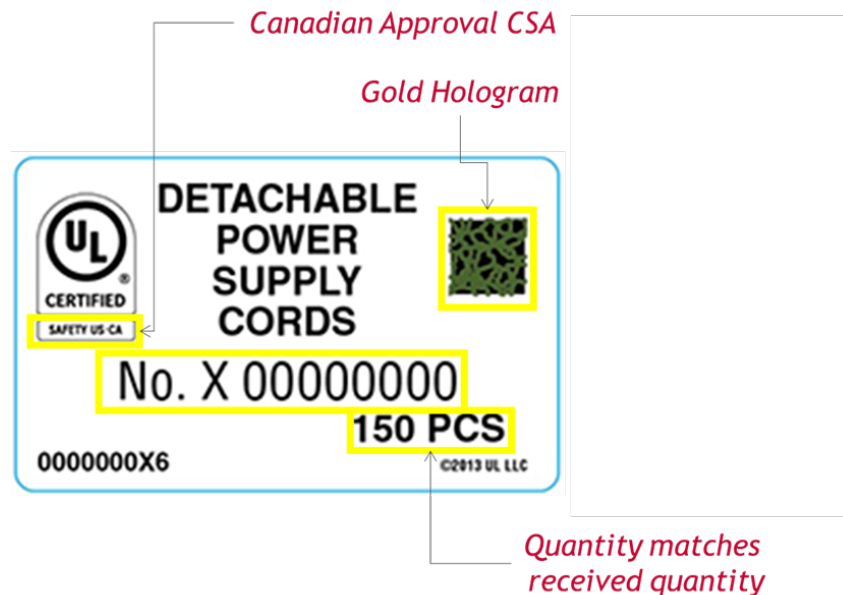

- C. Packaging - All cartons, required documentation, labels, packaging and packing slips must have part number, EC level or revision, quantity and P.O. number listed on them.

The above listed documentation must be submitted with each shipment. Material received without the completion and proper execution of the Quality Requirement allows Plexus the right to return the material.

Product change notification

Upon acceptance of conforming product, documentation, and the requirements of this Q-code, the supplier's manufacturing process shall be considered "qualified". All changes require written approval from Plexus prior to implementation. Product or Process change notification requests (PCNs) shall be submitted to pcns@plexus.com.